

Conex | Bänninger

>B< MaxiPro

Join the Press Revolution

Air Conditioning and Refrigeration



 >B< MaxiPro Technical Brochure

Join the Press Revolution

110 years of innovation

Conex Bänninger specialises in providing fittings, valves and accessories across the globe by offering innovative and versatile solutions. Since 1909, Conex Bänninger has produced over 22 billion fittings and valves and has built its reputation for quality European manufacturing, backed by first-class customer service and unrivalled expertise.

Passionate about excellence, Conex Bänninger is a byword for quality in the domestic, commercial, industrial, shipbuilding, air conditioning and refrigeration markets worldwide. Conex Bänninger is an ISO 9001 company, which assures their customers of consistency in the quality of their services and products.





>B< MaxiPro is a press fitting system for use with hard, half hard or annealed copper tube conforming to EN 12735-1, EN 12735-2 or ASTM-B280. >B< MaxiPro provides a secure, permanent leak-proof joint suitable for air conditioning and refrigeration applications.

Contents

1.0 Applications	1
2.0 Features and Benefits	2
3.0 Technology - 3 Point Press	3
4.0 Technical Data	4
5.0 Quality Assurance	4
6.0 Trademarks and Patents	4
7.0 Size Availability	4
8.0 Fitting Material	4
9.0 Approvals, Standards and Test Compliance	4
10.0 Fitting Storage	5
11.0 Marking and Cleanliness	5
12.0 Design Considerations	5
12.1 Pipework support	
12.2 Pipework protection	
12.3 Pipework identification and insulation	
12.4 Earth continuity	
12.5 Space required for the pressing process	
12.6 Insertion depth and minimum distances between pressings	
12.7 Minimum distance for press fittings from an existing brazed joint	
12.8 Minimum brazing distance to an existing pressed fitting	
12.9 Testing and commissioning of air conditioning and refrigeration systems	
12.10 >B< MaxiPro tube compatibility table	
13.0 >B< MaxiPro Installation Process	9
14.0 Frequently Asked Questions	12
15.0 Press Tools and Jaws	14
15.1 ROTHENBERGER ROMAX Compact TT	
15.2 ROTHENBERGER ROMAX 4000	
15.3 ROTHENBERGER customer service	
15.4 ROTHENBERGER warranty coverage	
16.0 Abbreviations	17
17.0 >B< MaxiPro Product Range	18
18.0 Extended Guarantee	25
19.0 Reference / Copy Pages	27

1.0 Applications

>B< MaxiPro fittings are designed for the following applications:

- Refrigeration
- Air conditioning
- Heat pump (refrigeration side)




2.0 Features and Benefits

Flame-free:	Flame-free installation avoids the need for a hot work permit and the risk of fire on site.
No nitrogen purge:	>B< MaxiPro is a mechanical joint, thus eliminating the need for nitrogen purge during the jointing process.
Lower installed cost:	A professional fitting which is quick and simple to install, saving time and money.
Higher productivity, improved flexibility:	Work may be completed during working hours / public access, by a single employee.
Site access:	Easy access to work sites, no gas bottles required.
Quality designed in:	Reliable, repeatable, permanent, tamper-proof connections every time.
3-point press:	Three press points, one each side of the bead, and one press compressing the O-ring. This provides a permanent and secure joint.
High quality O-ring:	A high quality HNBR O-ring forms a secure leak-free joint when pressed.
Protected O-ring:	Lead-in edge design aids tube insertion and helps protect the O-ring from damage or displacement.
Fitting identification:	Fittings are marked >B< MaxiPro and identified with a pink mark indicating their suitability for high pressure air conditioning and refrigeration applications.
Electrical continuity:	Maintains earth continuity without the need for additional earth continuity straps.
Certification:	>B< MaxiPro is UL listed, refrigerant fitting SA44668. >B< MaxiPro is UL listed, approved use for field and factory installations.
Field proven:	Press-fit technology, field proven over 20 years and millions of installed fittings worldwide.
Guarantee:	When professionally installed by a trained and certified >B< MaxiPro installer, >B< MaxiPro is covered by a ten (10) year extended guarantee. Please refer to full terms and conditions, see section 18.0.
Support:	Backed by Conex Bänninger's experienced technical support and customer services teams.
Compact tooling:	Light compact tooling provides easy access to tightly spaced tube runs.
Tooling concept:	We recommend using tried and tested ROTHENBERGER tools and jaws.

3.0 Technology 3-Point Press

>B< MaxiPro benefits from a 3-point press - three press points, one on each side of the bead and one press compressing the O-ring. This provides a permanent and secure joint.

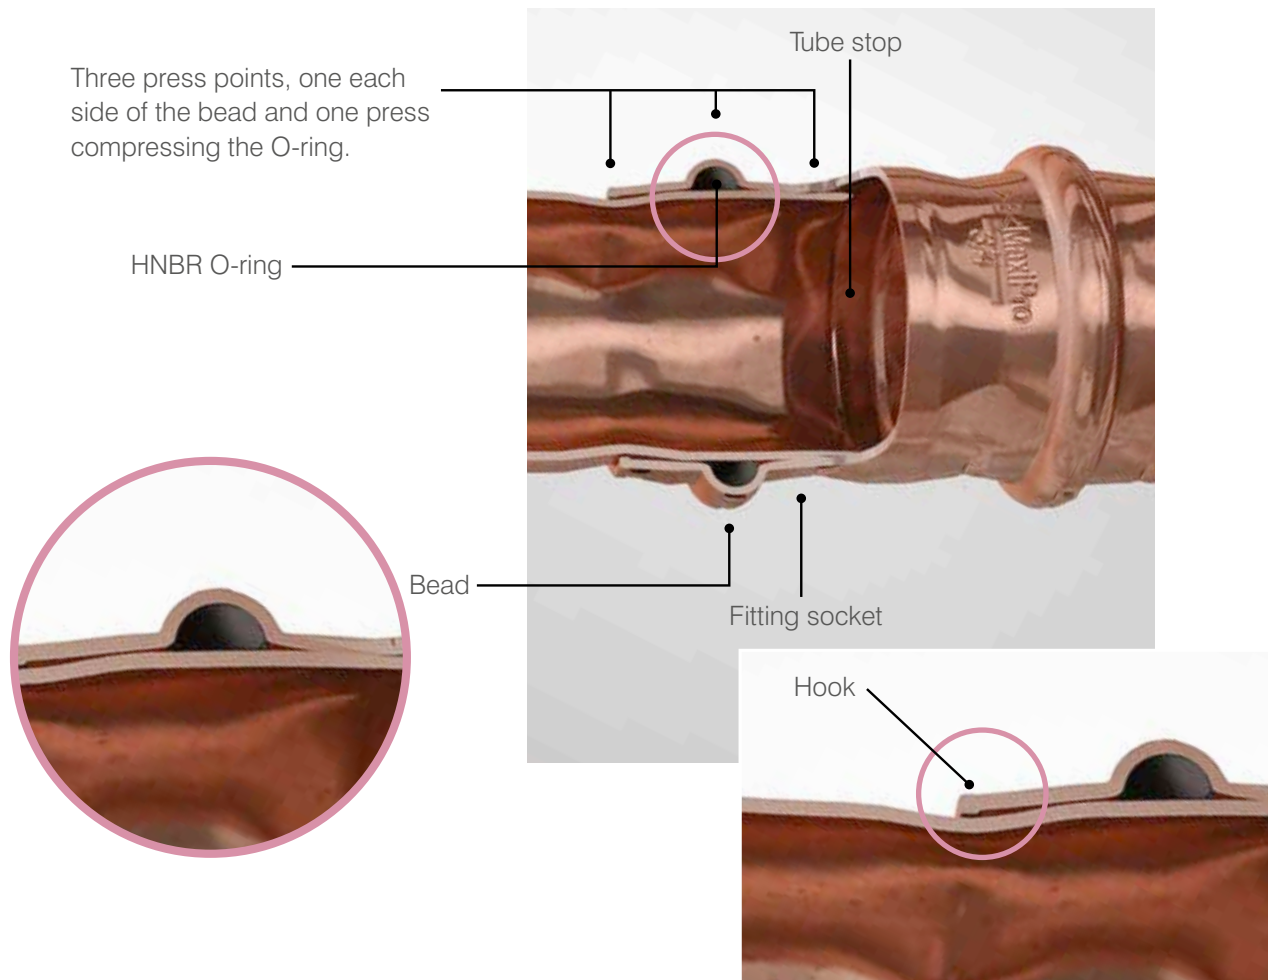

On fittings 1/2" and upwards, a hook ensures that the high pressure performance achieved by >B< MaxiPro fittings is maintained.



4.0 Technical Data

Technical Data	
Parameters	Capability
Applications	Air conditioning, refrigeration, heat pump (refrigerant side)
Connections	Copper to copper
Approved tube: Copper tube conforming to*	EN 12735-1, EN 12735-2 or ASTM-B280
Fitting / tube range	1/4", 3/8", 1/2", 5/8", 3/4", 7/8", 1", 1 1/8", 1 3/8"
Fitting material	Refrigerant grade copper (UNS C12200 min 99.9% pure)
O-ring	HNBR
Approved oils	POE, PAO, PVE, AB and MO
Maximum operating and abnormal pressure	48 bar / 4800 kPa / 700 psig
Burst pressure >3 x maximum operating and abnormal pressure EN 378-2	>144 bar / >14400 kPa / >2100 psi
Leak tightness	Helium $\leq 7.5 \times 10^{-7}$ Pa.m ³ /s at +20 °C, 10 bar
Vacuum	200 microns
O-ring temperature range	-40 °C to 140 °C / -40 °F to 284 °F
UL listing continuous operating temperature	-40 °C to 121 °C / -40 °F to 250 °F
Compatible refrigerants	R-1234yf**, R-1234ze**, R-125, R-134a, R-290**, R-32**, R-404A, R-407A, R-407C, R-407F, R-407H, R-410A, R-417A, R-421A, R-422B, R-422D, R-427A, R-438A, R-444A**, R-447A**, R-447B**, R-448A, R-449A, R-450A, R-452A, R-452B**, R-452C, R-454A**, R-454B**, R-454C**, R-457A**, R-459A**, R-507A, R-513A, R-513B, R-600A**, R-718 and HYCOOL 20.

*Please refer to >B< MaxiPro - Tube Compatibility Table, see section 12.10.

** When using refrigerants classified A2L (lower flammability), A2 (flammable) and A3 (higher flammability) additional/specific standards, local rules and regulations, codes of practice and by-laws may be applicable.

Note: >B< MaxiPro fittings are NOT suitable for R-717, R-723, R-764, R-744 refrigerants.

5.0 Quality Assurance

Conex Bänninger is an ISO 9001 quality assured company. We are committed to providing quality products and support to our customers.

6.0 Trademark and Patents

>B< MaxiPro is a registered trademark in numerous territories worldwide. For information on >B< MaxiPro patents visit www.conexbanninger.com/bmaxipro

7.0 Size Availability

>B< MaxiPro is available in the following sizes 1/4", 3/8", 1/2", 5/8", 3/4", 7/8", 1", 1 1/8", 1 3/8". For more information see range details.

8.0 Fitting Material

>B< MaxiPro is manufactured from refrigerant grade copper (UNS C12200 min 99.9% pure).

9.0 Approvals, Standards and Test Compliance

- >B< MaxiPro is UL listed, refrigerant fitting SA44668.
- >B< MaxiPro is UL listed, approved use for field and factory installations.
- UL 109 - 7 Pull test, compliant.
- UL 109 - 8 Vibration test, compliant.
- UL 1963 - 79 Tests of gaskets and seals used in refrigerant systems, compliant.
- ISO 5149-2, EN 378-2 - Refrigerating systems and heat pumps - Safety and environmental requirements - Part 2: Design, construction, testing, marking and documentation, compliant.
- ISO 5149-2, EN378-2 5.3.2.2.3 Strength pressure test, compliant.
- EN 14276-2 - 8.9.4.1.2 Type burst proof test, compliant.
- ISO 14903 - 7.4 Tightness test, compliant.
- ISO 14903 - 7.6 Pressure temperature vibration tests (PTV), compliant.
- ISO 14903 - 7.8 Freezing test, compliant.
- ASTM G85 salt spray (fog) test, compliant.

10.0 Fitting Storage

>B< MaxiPro fittings do not require special storage conditions. However to protect the HNBR O-ring a few simple precautions should be taken.

The O-rings should be protected from light sources, in particular direct sunlight or intense artificial light having a high ultra-violet content.

As ozone is particularly harmful to rubber, storage rooms should not contain any equipment that is capable of generating ozone, such as mercury vapour lamps or high-voltage electrical equipment giving rise to electric sparks or silent electrical discharges.

Combustion gases and organic vapours should be excluded from storage rooms, as they may give rise to ozone via photochemical processes. Precautions should also be taken to protect stored products from all sources of ionizing radiation.

>B< MaxiPro fittings should be kept in their sealed bags to protect them from contamination.

11.0 Marking and Cleanliness

Each fitting is marked >B< MaxiPro, size and 48 bar (on a pink background) and is cleaned, bagged and labelled to fully comply with the cleanliness requirements of EN 12735-1, EN 12735-2 and ASTM-B280. Keep the ziplock bag sealed to protect fittings from contamination.

12.0 Design Considerations

All refrigeration pipelines must be designed so that the number of joints is kept to a practical minimum. Refrigeration pipelines should be designed in compliance with the following key standards and in line with local regulations, codes of practice and by-laws governing the installation. All applicable health and safety practices must be adhered to.

- EN 378-2:2008+A2:2012 Refrigerating systems and heat pumps. Safety and environmental requirements. Design, construction, testing, marking and documentation.
- ISO 14903:2012 Refrigerating systems and heat pumps - Qualification of tightness of components and joints.
- EN 14276-2:2007+A1:2011. Pressure equipment for refrigerating systems and heat pumps. Piping. General requirements.

12.1 Pipework support

All pipework should be supported by the use of appropriate clips, brackets or supports. Please refer to:

- EN 378-2:2008+A2:2012 Refrigerating systems and heat pumps. Safety and environmental requirements. Design, construction, testing, marking and documentation.

Local regulations, codes of practice and by-laws governing the installation must also be adhered to. Supports should be placed near to fittings when possible and additional supports may be required when using soft copper tubes or where vibration occurs.

12.2 Pipework protection

Tubing and fittings shall be protected as far as possible against adverse environmental or other external effects. Please refer to:

- EN 378-2:2008+A2:2012 Refrigerating systems and heat pumps. Safety and environmental requirements. Design, construction, testing, marking and documentation.

Local regulations, codes of practice and by-laws governing the installation must also be adhered to.

12.3 Pipework identification and insulation

All pipework must be installed in accordance with:



- EN 378-2:2008+A2:2012 Refrigerating systems and heat pumps. Safety and environmental requirements. Design, construction, testing, marking and documentation.

Local regulations, codes of practice and by-laws governing the installation must also be adhered to.

12.4 Earth continuity

>B< MaxiPro fittings maintain earth continuity without the need for additional earth continuity straps.

12.5 Space required for the pressing process

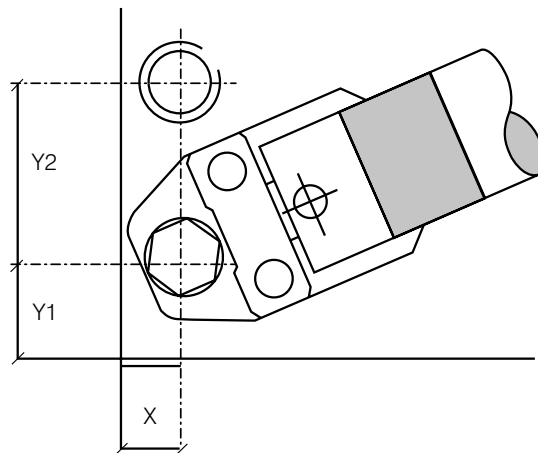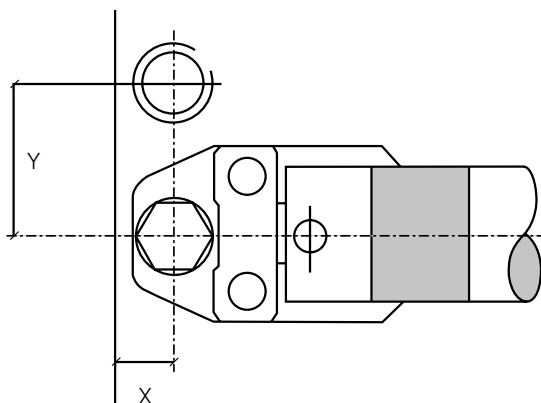

Space required for completing a pressing
between tubes and wall
ROTHENBERGER ROMAX Compact and Compact TT

Tube size nominal OD	X	Y
Inches	mm	mm
1/4"	30	55
3/8"	30	55
1/2"	25	55
5/8"	25	55
3/4"	25	55
7/8"	30	55
1"	30	55
1 1/8"	35	55

Space required for completing a pressing
between tubes and wall corner
ROTHENBERGER ROMAX Compact and Compact TT

Tube size nominal OD	X	Y1	Y2
Inches	mm	mm	mm
1/4"	40	40	100
3/8"	40	40	105
1/2"	40	40	105
5/8"	40	40	105
3/4"	40	40	105
7/8"	55	55	110
1"	60	60	115
1 1/8"	60	60	115

Space required for completing a pressing
between tubes and wall
ROTHENBERGER ROMAX 4000


Tube size nominal OD	X	Y
Inches	mm	mm
1/4"	30	60
3/8"	30	60
1/2"	30	60
5/8"	30	60
3/4"	30	60
7/8"	35	60
1"	35	60
1 1/8"	35	60
1 3/8"	35	60

Space required for completing a pressing
between tubes and wall corner
ROTHENBERGER ROMAX 4000

Tube size nominal OD	X	Y1	Y2
Inches	mm	mm	mm
1/4"	50	50	100
3/8"	50	50	100
1/2"	50	50	110
5/8"	50	50	110
3/4"	50	50	110
7/8"	60	60	120
1"	60	60	120
1 1/8"	60	60	120
1 3/8"	60	60	120

12.6 Insertion depth and minimum distances between pressings


Due to the reforming of the tube profile when pressed, it is advised that a minimum distance is allowed between each fitting.

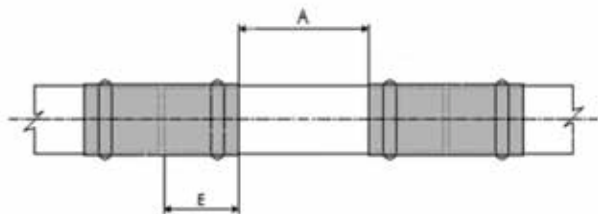

Insertion depth and minimum distance between pressings		
Tube size nominal OD	Minimum distance A	Insertion depth E
inches	mm	mm
1/4"	10	18.0
3/8"	10	18.0
1/2"	15	19.0
5/8"	15	22.0
3/4"	20	23.0
7/8"	20	25.0
1"	25	24.0
1 1/8"	25	26.5
1 3/8"	35	27.0

Note: A - clearance between fitting ends

12.7 Minimum distance for press fittings from an existing brazed joint

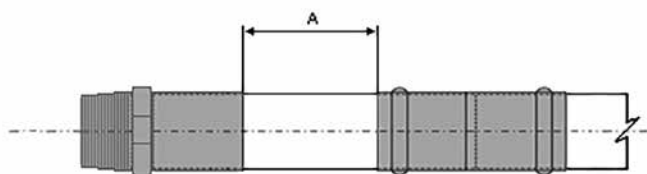

To ensure proper sealing of both the brazed and >B< MaxiPro fittings the following minimum distances must be maintained between the two fittings.


Minimum distance from a brazed joint	
Tube size nominal OD	Minimum distance A
Inches	mm
1/4"	10
3/8"	10
1/2"	15
5/8"	15
3/4"	20
7/8"	20
1"	25
1 1/8"	25
1 3/8"	35

Note: A - clearance between fitting ends

Note: It is important that there is no residual brazing or other foreign debris on the tubing to be inserted into the >B< MaxiPro fitting. The surface condition in the area of press joint should be clean and free from debris and comply with EN 12735-1, EN12735-2 and ASTM-B280.

12.8 Minimum brazing distance to an existing pressed fitting

Caution: Brazing near to >B< MaxiPro joints should be avoided as this may cause the seal to degrade due to heat transfer. The table below states the minimum distance away from the press joint from which it is acceptable to braze. If this distance cannot be maintained then adequate precautions must be taken such as fabricating the brazed section prior to assembly with the press fittings, wrapping in a wet rag or applying a heat barrier spray, gel or putty, to prevent heat transfer to the press fitting during brazing.

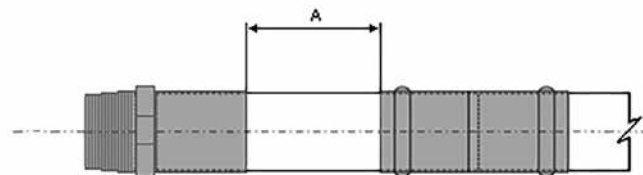

Minimum distance brazing	
Tube size nominal OD	Minimum distance A
Inches	mm
1/4"	250
3/8"	300
1/2"	350
5/8"	450
3/4"	500
7/8"	600
1"	650
1 1/8"	700
1 3/8"	900

Note: A - clearance between fitting ends

12.9 Testing and commissioning of air conditioning and refrigeration systems

Testing and commissioning of air conditioning and refrigeration systems should be in accordance with the requirements specified in:

- EN 378-2:2008+A2:2012 Refrigerating systems and heat pumps. Safety and environmental requirements. Design, construction, testing, marking and documentation.
- (EU) No 517/2014 on fluorinated greenhouse gases.

Local regulations, codes of practice and by-laws governing the installation must also be adhered to.

General

- Dry oxygen free nitrogen (OFN) should be used for tightness and strength testing as it is inert. Do not use oxygen for pressure testing, under pressure it reacts violently with hydrocarbons (oil and grease) resulting in explosions and fire.
- The maximum test pressure to be identified by the installer. This will be calculated from the system pressure and the test parameters.
- To ensure >B< MaxiPro fittings are tested safely, during the strength pressure and/or tightness test, the pressure should be raised gradually up to the desired test pressure of the system as established by the installer.
- If you are going to leave the pipework pressurized for 24 hours or longer to check for leaks, measure the system pressure and the ambient temperature at the start and finish of the tightness test. A rise in ambient temperature can mask a leak if this is not taken into account. There will be a pressure change of approximately 0.7 bar with a temperature change of 5 °C.
- Care must be taken to ensure a >B< MaxiPro joint will not be close enough to the liquid charging point that the temperature of the joint drops below -40 °C when breaking a vacuum by liquid charging the system.

Problem solving vacuum evacuation

Vacuum evacuation removes air, moisture, and non-condensable gases prior to system charging.

Failure to achieve a vacuum:

- A leak or moisture in the system (see below).
- Vacuum pump not working correctly.
- Vacuum pump does not have sufficient capacity.

Failure to hold a vacuum:

- A leak in the system or the connections to the system – find all leaks and repair them.
 - An ultrasonic leak detector can help pinpoint leaks on a system under vacuum.
- Moisture or refrigerant still in the system – continue evacuation.
- No remedial action e.g. cutting out fittings from the system should be taken until a proper fault finding exercise has been completed.

12.10 >B< MaxiPro tube compatibility table

>B< MaxiPro fitting size	Tube size Nominal OD		EN 12735-1 / EN 12735-2 - AS/ NZS 1571 - ASTM B280 - ASTM B88 - JIS H 3300												
			Nominal wall thickness												
	Inch		0.025"	0.028" 22swg	0.030"	0.031" 0.032" 21swg	0.035" 0.036" 20swg	0.039" 0.040" 19swg	0.042"	0.045"	0.048" 18swg	0.049" 0.050"	0.055"	0.064" 0.065" 16swg	0.072" 15swg
	Inch	mm	0.64	0.71	0.76	0.80 0.81	0.89 0.90 0.91	1.00 1.02	1.07	1.14	1.22	1.24 1.25 1.27	1.40	1.63 1.65	1.83
1/4	0.250"	6.35	■	● ■	● ■	● ■	● ■	● ■							
3/8	0.375"	9.53		● ■	● ■	● ■	● ■	● ■							
1/2	0.500"	12.70		● ■	● ■	● ■	● ■	● ■			■	● ■			
5/8	0.625"	15.88		●	●	● ■	● ■	● ■		●	■	● ■			
3/4	0.750"	19.05		● ■		● ■	● ■	● ■	● ■	● ■	● ■	● ■			
7/8	0.875"	22.23		■		● ■	● ■	● ■		● ■	■	■	■	● ■	
1	1.000"	25.40		■			■	■			■			■	
1 1/8	1.125"	28.58					■	■			■	■		■	■
1 3/8	1.375"	34.93					■		■		■	■	■	■	

● Coil lengths in annealed condition

■ Straight lengths in hard /half hard condition

Notes:

Hardness tolerance as per approved standards in the table above.

Ensure coil tubes are in round condition. Oval tubes should be re-rounded.

It is the engineer's responsibility to ensure that the tube selected is compatible with >B< MaxiPro and meets the operating pressure requirements of the system.



13.0 >B< MaxiPro Installation Process

General: Conex Bänninger >B<MaxiPro fittings must be installed by an installer who is appropriately trained and qualified to work on air conditioning and refrigeration installations and certified via the >B< MaxiPro training course. All installations must be completed in line with local regulations and by-laws governing the installation, and all applicable health and safety practices must be adhered to.

When using the press tools, care must be taken to ensure hands are kept away from the jaw during the pressing process. Always wear ear and eye protection.

Important: Select the correct size of tube, fitting and jaw for the job. Ensure the fitting and tube are kept free of any dust or dirt and that the O-ring is undamaged. Check the inner pressing contour of the jaw is free of dirt and debris.

Do not force tube ends together prior to making joints. Joints should only be made on an unstressed pipework assembly.

Remarks:

- A joint is finished after one complete compression cycle of the tool.
- Do not press any >B< MaxiPro fitting more than once.
- Pipework alignment must be completed prior to pressing.
- Do not rotate joints after they have been pressed.

Copper tube compatibility: Please refer to tube compatibility table, section 12.10.

Maximum operating pressure: 48 bar, 4800 kPa, 700 psig.

Operating temperature range: -40 °C to 121 °C, -40 °F to 250 °F.

Compatible refrigerants: R-1234yf**, R-1234ze**, R-125, R-134a, R-290**, R-32**, R-404A, R-407A, R-407C, R-407F, R-407H, R-410A, R-417A, R-421A, R-422B, R-422D, R-427A, R-438A, R-444A**, R-447A**, R-447B**, R-448A, R-449A, R-450A, R-452A, R-452B**, R-452C, R-454A**, R-454B**, R-454C**, R-457A**, R-459A**, R-507A, R-513A, R-513B, R-600A**, R-718 and HYCOOL 20.

** When using refrigerants classified A2L (lower flammability), A2 (flammable) and A3 (higher flammability) additional/specific standards, local rules and regulations, codes of practice and by-laws may be applicable.

>B< MaxiPro fittings are NOT suitable for R-717, R-723, R-764, R-744 refrigerants.

Compatible oils: POE, PAO, PVE, AB and MO.



1. Cut the tube to length

- Use a rotary tube cutter.
- Ensure that the tube is cut square.
- Check the tube has retained its shape and is damage free.



2. Deburr and remove all external sharp edges

- Deburr the tube both internally and externally.
- Where possible angle the tube downwards to prevent filings entering the tube.
- Use a pencil type deburrer on internal tube edges.
- Make sure the internal and external surfaces of the tube ends are smooth and free from burrs or sharp edges.



3. Use a pencil type deburrer on internal edges



4. Clean the tube end

- Thoroughly clean the tube end using ROTHENBERGER Rovlies or similar cleaning pad in a rotating action.
- Tube ends must be free from scratches, oxidation, dirt and debris.



5. Check for defects

- If deep scratches are still visible, cut the tube back to a clean section.



6. Ensure the O-ring is seated

- Check the fitting is the correct size for the tube.
- Check the O-rings are present and correctly seated.
- A small additional amount of Conex Bänninger press fitting lubricant may be used to aid tube insertion.



7a. Mark insertion depth on tube using depth gauge

- Insert tube into correct socket in depth gauge.
- Check window to see the tube is fully inserted.
- Mark the insertion depth on the tube.



7b. Alternatively insert tube to tube stop and mark

- The tube must be fully inserted into the fitting until it reaches the tube stop.
- To reduce the risk of dislodging the O-ring rotate the tube (if possible) while slipping it into the fitting.
- Mark the insertion depth on the tube.



7b. Check the depth mark

- Remove the tube and align with fitting socket, check that the depth mark is correctly positioned.
- The insertion depth mark is used as a reference prior to pressing the joint.



8. Insert the tube fully into the fitting. Ensure tube is fully inserted prior to pressing

- Insert the tube fully into the fitting up to the tube stop.
- To reduce the risk of dislodging the O-ring rotate the tube (if possible) while slipping it into the fitting.
- Prior to pressing ensure the tube has not moved out from the fitting socket.
- Use the insertion depth mark as a guide.



9. Align jaws squarely on the fitting

- Ensure pipework is correctly aligned prior to pressing.
- Ensure the correct size jaw is inserted into the tool.
- The jaws must be placed squarely on the fitting locating the groove on the bead.
- The bead on the fitting should fit centrally in the groove of the jaw.



10. Complete the joint with the approved tool. Press once only

- Depress and hold the button to complete the pressing cycle.
- Pressing is complete when the jaws are fully closed and the piston retracts.
- Complete the press cycle once only – do not repress.
- Release the jaws from the pressing.



11. Mark the completed joint

- Mark the completed joint after pressing.
- This enable joints to be inspected easily before testing and insulating the pipework.




>B< MaxiPro home page

Use QR code app on your smart phone or tablet to access >B< MaxiPro home page.

Note: Only ROTHENBERGER tools and jaws are approved for use with >B< MaxiPro fittings.


Installing a >B< MaxiPro female flare connector to a male flare connector.

Make the flare connection prior to pressing the >B< MaxiPro joint. If this is not possible care must be taken to prevent rotational forces being applied to the pressed joint.

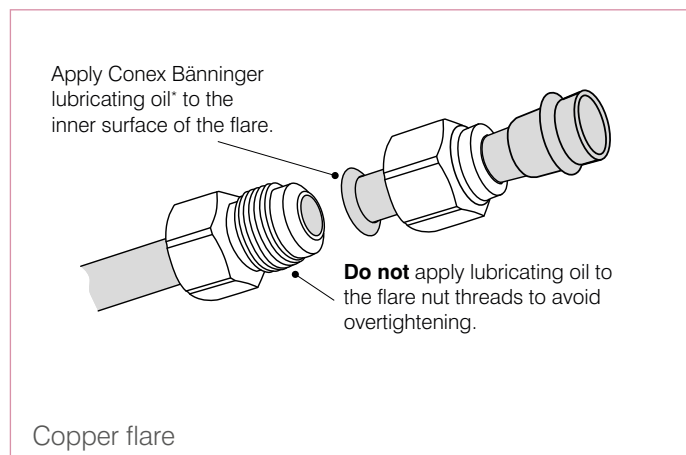


Align the centres of both flares and tighten the flares by hand.

***Note:** A compatible refrigerant oil may be used if Conex Bänninger lubricating oil is not available.

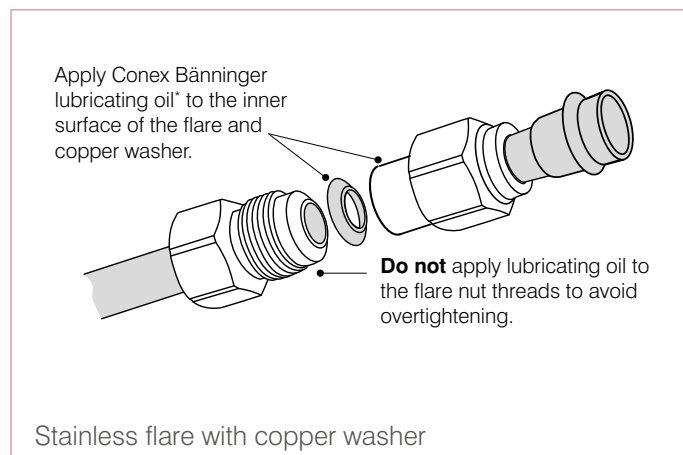

Align the centres of both flares and tighten the flares by hand.

***Note:** A compatible refrigerant oil may be used if Conex Bänninger lubricating oil is not available.

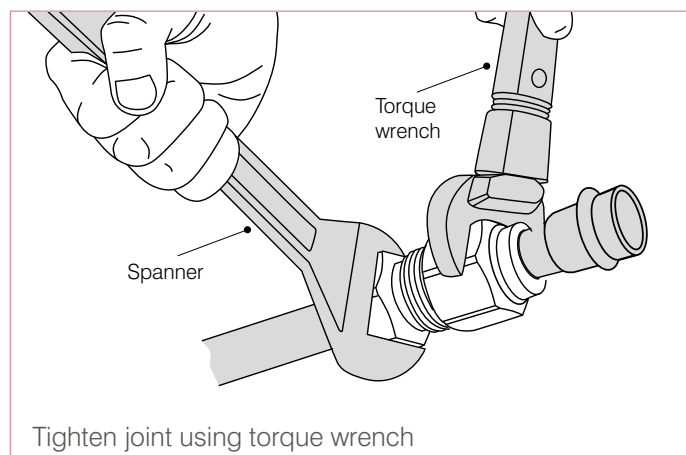

Fully tighten using spanner and torque wrench to the torque values set out in the table. **Do not over tighten.**

Flares Tightening Torque		
Size	Nm	ft lbf
1/4"	14-18	11-13
3/8"	33-42	25-31
1/2"	50-62	37-45
5/8"	63-77	47-56
3/4"	90-110	67-81
Do not over tighten		

14.0 Frequently Asked Questions

1. How long is the Conex Bänninger business heritage?

Since 1909.

2. Where are the >B< MaxiPro fittings manufactured?

The products are manufactured in Europe.

3. Does >B< MaxiPro work on both hard and soft copper?

Yes, >B< MaxiPro is a press fitting system for use with hard, half hard or annealed copper tube. Please refer to >B< MaxiPro - Tube Compatibility Table, see section 12.10.

4. Can you use >B< MaxiPro to crimp to aluminium, steel, or stainless steel?

No, >B< MaxiPro is specifically designed for copper to copper connections. Connecting to dissimilar metals can cause corrosion issues that could cause a failure.

5. What is the guarantee on >B< MaxiPro fittings?

When professionally installed by a trained and certified >B< MaxiPro installer, >B< MaxiPro has a ten (10) year extended guarantee from the first date of purchase. Please refer to full terms and conditions, see section 18.0.

6. What material is the O-ring made of?

The O-ring is manufactured from Hydrogenated Nitrile Butadiene Rubber (HNBR).

7. What is the expected life of the O-ring in the system?

The O-ring is manufactured by Germany's leading producer of O-rings. The expected life of the O-ring if used within the product specifications for temperature and pressure is at least 25 years.

8. Are there any storage issues, including where the fittings are stored in vehicles and exposed to extremes of high or low temperature?

No, the product is not subject to degradation under normal storage conditions. Provided it is kept in original packaging and not exposed to direct sunlight for long periods. Please see section 10.0 for details regarding fitting storage.

9. What refrigerants is >B< MaxiPro compatible with?

>B< MaxiPro is compatible with R-1234yf**, R-1234ze**, R-125, R-134a, R-290**, R-32**, R-404A, R-407A, R-407C, R-407F, R-407H, R-410A, R-417A, R-421A, R-422B, R-422D, R-427A, R-438A, R-444A**, R-447A**, R-447B**, R-448A, R-449A, R-450A, R-452A, R-452B**, R-452C, R-454A**, R-454B**, R-454C**, R-457A**, R-459A**, R-507A, R-513A, R-513B, R-600A**, R-718 and HYCOOL 20.

** When using refrigerants classified A2L (lower flammability), A2 (flammable) and A3 (higher flammability) additional/ specific standards, local rules and regulations, codes of practice and by-laws may be applicable.

Note: >B< MaxiPro fittings are NOT suitable for R-717, R-723, R-764, R-744 refrigerants. Please check our website www.conexbanninger.com/bmaxipro for updates on the >B< MaxiPro range.

10. What oils are approved for use with >B< MaxiPro?

>B< MaxiPro is approved for use with POE, PAO, PVE, AB and MO. The O-ring has been tested successfully with PAG oil however PAG oil should not be used with copper systems due to potential for corrosion of the copper material.

11. If a fitting leaks on installation, can you braze the fitting rather than cutting out the joint and having to replace missing tube?

No, if a fitting that has been pressed is leaking, the fitting must be cut out and replaced. You should not attempt to braze the fitting as you may melt the O-ring material and thus introduce contaminants into the system that could cause other system issues.

12. Is there a concern about ice building up and then thawing under the fitting in a horizontal or vertical configuration?

No, >B< MaxiPro has been thoroughly freeze / thaw tested. ISO 14903 - Freeze / thaw test, compliant.

13. Are there any concerns with corrosion where installations are made in coastal areas or with respect to cleaning agents?

No, >B< MaxiPro has been Acid Salt Spray tested to ASTM G85. As with all copper installations exposure to ammonia should be avoided.

14. How do you know when the tool needs to be serviced?

The ROTHENBERGER ROMAX® Compact TT and 4000 tools should be serviced every 40,000 cycles or 2 years whichever comes first. LEDs on the tools will flash when it has completed 40,000 cycles.

15. Do >B< MaxiPro jaws need servicing?

Jaws should be serviced at the same time as the tool to check for any damage, defects and general wear and tear that could affect the press performance or safety.

16. Are the >B< MaxiPro jaws compatible with any other commercially available crimping tool?

Only ROTHENBERGER tools and jaws are approved for use with >B< MaxiPro.

17. What approvals are held by >B< MaxiPro?

>B< MaxiPro is UL listed, refrigerant fitting SA44668.
 >B< MaxiPro is UL listed, approved use for field and factory installations.
 UL 109 - 7 Pull test, compliant.
 UL 109 - 8 Vibration test, compliant.
 UL 1963 - 79 Tests of gaskets and seals used in refrigerant systems, compliant.
 ISO 5149-2, EN 378-2, Refrigerating systems and heat pumps - Safety and environmental requirements – Part 2: Design, construction, testing, marking and documentation, compliant.
 ISO 5149-2, EN378-2 5.3.2.2.3 Strength pressure test, compliant.
 EN 14276-2 - 8.9.4.1.2 Type burst proof test, compliant.
 ISO 14903 - 7.4 Tightness test, compliant.

ISO 14903 - 7.6 Pressure temperature vibration tests (PTV), compliant.

ISO 14903 - 7.8 Freezing test, compliant.

ASTM G85 salt spray (fog) test, compliant.

18. What tube diameter is acceptable if a crimp joint is going to be made with >B< MaxiPro?

>B< MaxiPro is a press fitting system for use with hard, half hard or annealed copper tube. Please refer to >B< MaxiPro tube compatibility table, see section 12.10.

19. Does the O-ring compensate for imperfections in the tube to make a tight seal?

Yes, the O-ring does compensate for small/minor scratches on the surface of the tube. However imperfections adjacent to the crimp area such as scratches, incise marks, and tubing that is not round must be avoided.

20. The product specifications state that the application temperature limits are -40 °C to 121 °C. What happens if we go beyond that limit?

>B< MaxiPro is suitable for continuous operating at temperatures between -40 °C and +121 °C. It will also cope with short term excursions up to 140 °C. Operating at temperatures outside this range is not acceptable and may lead to failure.

21. How clean are >B< MaxiPro fittings?

>B< MaxiPro fittings comply with the cleanliness standards as required in the following Copper Tube Standards EN 12735-1, EN 12735-2 and ASTM-B280. Keep the ziplock bag sealed to protect fittings from contamination.

22. How do the fittings cope with vibration from the system?

Vibration is a recognised cause of leaks and the system must be designed and installed to comply with all local standards and codes of practice which aim to minimise vibration.

>B< MaxiPro fittings have been extensively tested to ensure the joint will not leak as a result of system vibration and complies with the following standards:

- ISO 14903 temperature pressure cycling and vibration test
- UL 109 - 8 vibration test
- UL 207 fatigue shock test

23. Will the O-ring be damaged if acid develops in the refrigeration system?

Good installation practice, a nitrogen purge during any brazing (not required with >B< MaxiPro mechanical fittings), a deep evacuation, and the proper installation and use of filter-driers containing modern and effective molecular sieve desiccants will prevent many system failures. Including the build up of acid within the system.

When selecting which desiccant material is best for an application, water capacity, refrigerant and lubricant compatibility, acid capacity, and physical strength are important characteristics and should be considered.

24. When pressed, small size fittings, particularly elbows may allow a small amount of rotational movement to be induced at the joint. Will this affect the security of the joint?

No, some rotational movement is quite acceptable, the joint will not leak nor will it come apart under pressure loading and during system operation. Some joint movement is good as it will allow for expansion and contraction in the pipework system.

25. Is >B< MaxiPro suitable for medical gas applications?

No, >B< MaxiPro is not suitable for medical gas applications.

26. Can you press a fitting more than once?

No >B< MaxiPro fittings can be pressed only once.

27. Is >B< MaxiPro approved for drinking water systems?

No >B< MaxiPro is not approved for drinking water systems.

28. Can >B< MaxiPro be used on heating and hot water systems?

No >B< MaxiPro is approved for use in air conditioning and refrigeration applications only.

29. If my system fails to achieve or hold a vacuum what should I do?

Problem Solving Vacuum Evacuation

Vacuum evacuation removes air, moisture, and non-condensable gases prior to system charging.

Failure to achieve a vacuum:

- A leak or moisture in the system (see below).
- Vacuum pump not working correctly.
- Vacuum pump does not have sufficient capacity.

Failure to hold a vacuum:

- A leak in the system or the connections to the system – find all leaks and repair them.
 - An ultrasonic leak detector can help pinpoint leaks on a system under vacuum.
- Moisture or refrigerant still in the system – continue evacuation.
- No remedial action e.g. cutting out fittings from the system should be taken until a proper fault finding exercise has been completed.

30. I am having a problem achieving a seal on a flared connection what should I do?

If you cannot achieve a seal on a flared connection, place a small drop of Conex Banninger press fitting lubricant on the sealing face.

15.0 Press Tools and Jaws

Conex Bänninger recommends the use of ROTHENBERGER press tools. Only ROTHENBERGER jaws are approved for use with >B< MaxiPro fittings.

15.1 ROTHENBERGER ROMAX® Compact TT:



- Application sizes: 1/4" to 1 1/8" >B< MaxiPro fittings
- Compact light weight design – one hand operation.
- CFT® - Technology for constant 19 kN pressing force.
- Safety latch to ensure jaw cannot come out during operation.
- Easy to follow LED status indication:
 - Green pressing process can be completed
 - Red the rechargeable battery is discharged
 - Flashing red after 40,000 presses indicating that the tool needs serviced.
- Simple & safe operation – hold start button – tool automatically stops once press cycle is complete.
- Integral LED light illuminates work area during and after pressing (approx. 30 secs after end of pressing process).
- Safety yellow button – press to release pressure and stop press cycle.
- Convenient 40,000 cycle or 2 year interval (whichever comes first) between service requirements.
- Head positioning up to 270° rotation – easy fitting in difficult locations.
- Li-Ion battery technology – long lasting operation between charges. Battery options 2.0 Ah and 4.0 Ah.

Specifications ROTHENBERGER ROMAX Compact TT

Battery voltage – 18 V
Battery capacity – 2.0 Ah / 4.0 Ah
Rated power consumption – 281 Watts
Max piston force – 19 kN metal fittings
Pressing time - ca. 3 secs (nominal)
Dimensions (L x W x H) – 336 x 143 x 76 mm
Weight (less battery) - ca. 2.1 kg
Working range: Copper system 1/4" – 1 1/8"
The noise level during operation can exceed 85 dB (A). Wear hearing protection
Battery charging time (90% full) - ca. 40 / 80 min.
Approximate pressings per full charge – 100 / 140 1 1/8" fittings more from smaller sizes

Note: When using the tool wear ear and eye protection.

Tool compatibility table 19 kN press tool and jaws

Conex Bänninger recommends the use of ROTHENBERGER 19 kN press tools in combination with >B< MaxiPro jaws. Only ROTHENBERGER 19 kN press jaws are approved for use with >B< MaxiPro fittings as shown in tables 1 and 2.

Other 19 kN press tools with compatible press jaw interface may be used in combination with ROTHENBERGER >B< MaxiPro jaws. See tables 3 and 4 for recommended and other compatible press tools.

All tools and jaws used must be maintained and serviced in line with manufacturers recommendations.

Table 1

Approved >B< MaxiPro 19 kN press jaws		
Size	Manufacturer	Serial No.
1/4"	ROTHENBERGER	No. 1000001749
3/8"	ROTHENBERGER	No. 1000001750
1/2"	ROTHENBERGER	No. 1000001751
5/8"	ROTHENBERGER	No. 1000001752
3/4"	ROTHENBERGER	No. 1000001753
7/8"	ROTHENBERGER	No. 1000001754
1"	ROTHENBERGER	No. 1000001755
1 1/8"	ROTHENBERGER	No. 1000001756

Table 2

Approved >B< MaxiPro 19 kN jaw set		
Size	Manufacturer	Serial No.
1/4" - 1 1/8"	ROTHENBERGER	No. 1000001989

Table 3

Recommended 19 kN press tools		
Manufacturer	Model	Compatible
ROTHENBERGER	ROMAX® Compact TT (Europe)	✓
ROTHENBERGER	ROMAX® Compact	✓
ROTHENBERGER	ROMAX® TT US (USA 24 kN)	✗

Table 4

Other compatible 19 kN press tools		
Manufacturer	Model	Compatible
KLAUKE	MAP2L19	✓
KLAUKE	MAP219	✓
HILTI	NPR019	✓

15.2 ROTHEMBERGER ROMAX® 4000



Specifications ROTHENBERGER ROMAX 4000

Battery voltage – 18.0 V
Battery capacity – 2.0 Ah / 4.0 Ah
Rated power consumption – 540 Watts
Max piston force – 32 kN
Pressing time – 5 secs (nominal)
Dimensions (LxWxH) – 450 x 125 x 79 mm
Weight (less battery) – 2.9 kg
Working range: Copper system 1/4" – 4"
Typical A-rate noise level – 85 dB(A)
Battery charging time (90% full) – ca. 40 / 80 min.
Approximate pressings per full charge – 240

Note: When using the tool wear ear and eye protection.

- Application sizes: 1/4" to 1 3/8" >B< MaxiPro fittings
- Light in weight with balanced weight distribution ensures fatigue free operation over long periods.
- Constant Force Technology (CFT®), for constant axial pressing force of 32 kN.
- Simple and safe operation, press and hold start button – tool automatically stops after press cycle is complete, piston retracts.
- Pressing cycle less than 5 seconds
- Yellow emergency stop button, immediate interruption of the press cycle and retraction of the piston.
- Safety lock, ensures the jaw cannot come out during operation.
- Press jaw fixture can be rotated by 360° for easy operation in confined spaces.
- Expanded service interval of 40,000 cycles.
- The service counter records the number of pressings. After 40,000 pressings the white LEDs that illuminate the work area flash at the end of every pressing cycle indicating that service is due. The tool continues to operate but should be serviced at the earliest opportunity.
- Li-ion battery with charge indicator.
- Powerful long lasting 18 V / 4.0 Ah or 2.0 Ah battery, with charge indicator. Up to 240 presses with 4.0 Ah battery.

Tool compatibility table 32 kN press tool and jaws

Conex Bänninger recommends the use of ROTHENBERGER 32 kN press tools in combination with >B< MaxiPro jaws. Only ROTHENBERGER 32 kN press jaws are approved for use with >B< MaxiPro fittings as shown in tables 1 and 2.

Other 32 kN press tools with compatible press jaw interface may be used in combination with ROTHENBERGER >B< MaxiPro jaws. See tables 3 and 4 for recommended and other compatible press tools.

All tools and jaws used must be maintained and serviced in line with manufacturers recommendations.

Table 1

Approved >B< MaxiPro 32 kN press jaws		
Size	Manufacturer	Serial No.
1/4"	ROTHENBERGER	No. 1000001889
3/8"	ROTHENBERGER	No. 1000001890
1/2"	ROTHENBERGER	No. 1000001891
5/8"	ROTHENBERGER	No. 1000001892
3/4"	ROTHENBERGER	No. 1000001893
7/8"	ROTHENBERGER	No. 1000001894
1"	ROTHENBERGER	No. 1000001895
1 1/8"	ROTHENBERGER	No. 1000001896
1 3/8"	ROTHENBERGER	No. 1000002943

Table 2

Approved >B< MaxiPro 32 kN jaw set		
Size	Manufacturer	Serial No.
1/4" - 1 1/8"	ROTHENBERGER 8 jaw set	No. 1000002207
1/4" - 7/8" & 1 1/8"	ROTHENBERGER 7 jaw set (excluding 1")	No. 1000002206

Table 3

Recommended 32 kN press tools		
Manufacturer	Model	Compatible
ROTHENBERGER	ROMAX® 3000	✓
ROTHENBERGER	ROMAX® 3000 AC	✓
ROTHENBERGER	ROMAX® 4000	✓
ROTHENBERGER	ROMAX® AC ECO	✓

Table 4

Other compatible 32 kN press tools		
Manufacturer	Model	Compatible
HILTI	NPR 032 IE-A22	✓
KLAUKE	UAP2	✓
KLAUKE	UAP3L	✓
KLAUKE	UAP332	✓
REMS	Power-Press	✓
REMS	Akku-Press	✓
RIDGID	RP 320	✓
RIDGID	RP 330	✓
RIDGID	RP 340	✓
VIRAX	Viper P25+	✓
VIRAX	Viper P30+	✓

15.3 ROTHENBERGER customer service

ROTHENBERGER prides itself on leading edge design and leading after-sale service support. With ownership of your ROTHENBERGER tool comes ROTHENBERGER'S commitment to support you. ROTHENBERGER wants to help you 'look after your tool', so you don't compromise your reputation. Only have your press tool inspected and serviced by a qualified ROTHENBERGER service centre.

For your local ROTHENBERGER service centre see listing in ROTHENBERGER catalogue or online. Accessories and replacement parts are also available through these same service locations.

15.4 ROTHENBERGER warranty coverage

- Tool and jaws minimum 12 month* guarantee against material and manufacturing defects.
- Battery and battery charger minimum 12 month* guarantee against material and manufacturing defects.
- Jaws should be serviced at the same time as the tool to check for any damage, defects and general wear and tear that could affect the press performance or safety.
- A press cycle count will be made as part of your annual tool and jaw servicing and report.
- If a serial number sticker is damaged the warranty will be null and void.
- The warranty does not cover damage caused by incorrect use of the equipment.

For tool warranty period and more detailed information please contact your local ROTHENBERGER market organisation.


* Special arrangements by the different market organizations can extend the 12 month warranty coverage.

16.0 Abbreviations

AB oil	Alkyl Benzene oil.
ASTM-B280-13	American Standard Specification for Seamless Copper Tube for Air Conditioning and Refrigeration Field Service.
CDA	Copper Development Association.
CFT	Constant Force Technology.
EN 378-2:2008 +A2:2012	European Standard for Refrigerating systems and heat pumps. Safety and environmental requirements. Design, construction, testing, marking and documentation.
EN 12735-1:2016	European Standard for Copper and copper alloys. Seamless, round copper tubes for air conditioning and refrigeration. Tubes for piping systems.
EN 12735-2: 2016	Copper and copper alloys - Seamless, round tubes for air conditioning and refrigeration - Part 2: Tubes for equipment.
EN 14276-2:2007 +A1:2011	European Standard for Pressure equipment for refrigerating systems and heat pumps. Piping. General requirements.
HNBR	Hydrogenated Nitrile Butadiene Rubber.
ISO 5149-2:2014	International Standard for Refrigerating systems and heat pumps - Safety and environmental requirements - Part 2: Design, construction, testing, marking and documentation.
ISO 9001	Certified quality management system.
ISO 14903:2012	International Standard for Refrigerating systems and heat pumps - Qualification of tightness of components and joints. Section 7.6 Pressure temperature vibration tests (PTV).
LED	Light Emitting Diode.
PAO oil	Poly-alpha-olefin oil.
POE oil	Polyolester oil.
PVE oil	Polyvinylether oil.
SMS	Short Message Service.
UL 207	Standard for Refrigerant-Containing Components and Accessories, Nonelectrical.
UL 1963 - 79	Standard for Refrigerant Recovery / Recycling Equipment. Section 79 Tests of Gaskets and Seals Used in Refrigerant Systems.
UL 109 - 7	Standard for Tube Fittings for Flammable and Combustible Fluids, Refrigeration Service, and Marine Use. Section 7 Pull test.
UL 109 - 8	Standard for Tube Fittings for Flammable and Combustible Fluids, Refrigeration Service, and Marine Use. Section 8 Vibration test.
UNS	Unified Numbering System.

17.0 >B< MaxiPro Product Range


MPA5270 Straight Coupler

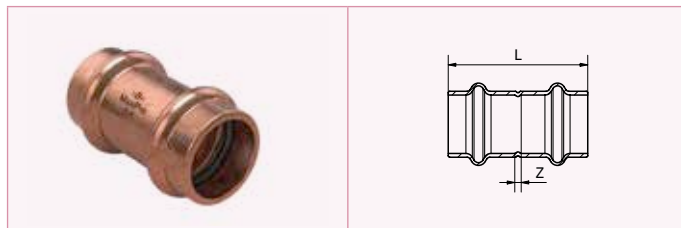

Code	Size	L	Z
MPA5270 0020001	1/4"	39.0	3.0
MPA5270 0030001	3/8"	38.0	3.0
MPA5270 0040001	1/2"	40.0	5.0
MPA5270 0050001	5/8"	45.0	3.0
MPA5270 0060001	3/4"	45.5	1.5
MPA5270 0070001	7/8"	56.5	8.5
MPA5270 0080001	1"	49.0	2.0
MPA5270 0090001	1 1/8"	57.0	6.0
MPA5270 0110001	1 3/8"	71.0	17.0

18


MPA5270L Long Coupler

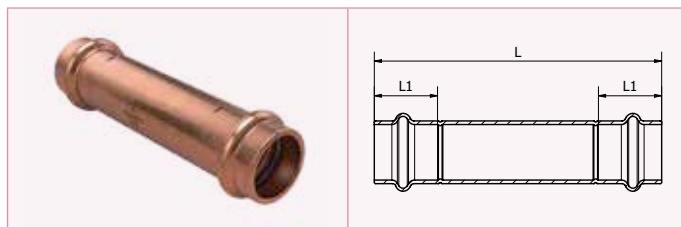

Code	Size	L	L1
MPA5270L0020001	1/4"	90.0	18.0
MPA5270L0030001	3/8"	90.0	18.0
MPA5270L0040001	1/2"	91.0	17.5
MPA5270L0050001	5/8"	101.0	21.0
MPA5270L0060001	3/4"	101.0	22.0
MPA5270L0070001	7/8"	106.0	24.0
MPA5270L0080001	1"	105.0	23.5
MPA5270L0090001	1 1/8"	106.0	25.5


Note: All above measurements are in mm unless stated differently.

MPA5275L Long Repair Coupler

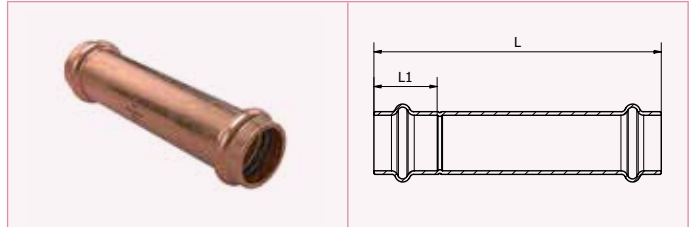


Code	Size	L	L1
MPA5275L0020001	1/4"	91.0	18.0
MPA5275L0030001	3/8"	90.0	18.0
MPA5275L0040001	1/2"	91.0	17.5
MPA5275L0050001	5/8"	101.0	21.0
MPA5275L0060001	3/4"	101.0	22.0
MPA5275L0070001	7/8"	105.0	24.0
MPA5275L0080001	1"	105.0	23.5
MPA5275L0090001	1 1/8"	106.0	25.5

MPA5243 Fitting Reducer

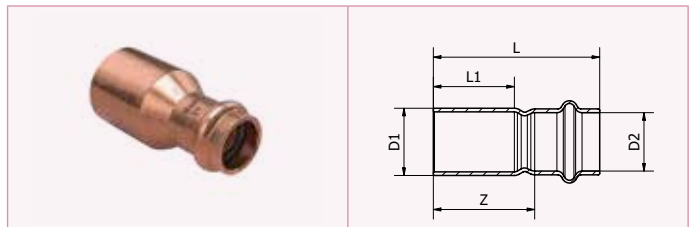


Code	Size	L	L1 Min	Z	D1	D2
MPA5243 0030201	3/8" x 1/4"	44.0	21.0	26.0	3/8"	1/4"
MPA5243 0040301	1/2" x 3/8"	45.0	20.5	27.0	1/2"	3/8"
MPA5243 0050301	5/8" x 3/8"	47.5	24.0	29.5	5/8"	3/8"
MPA5243 0050401	5/8" x 1/2"	46.0	24.0	28.5	5/8"	1/2"
MPA5243 0060401	3/4" x 1/2"	53.0	25.0	35.5	3/4"	1/2"
MPA5243 0060501	3/4" x 5/8"	53.5	25.0	32.5	3/4"	5/8"
MPA5243 0070401	7/8" x 1/2"	54.0	27.0	36.5	7/8"	1/2"
MPA5243 0070501	7/8" x 5/8"	54.5	27.0	33.5	7/8"	5/8"
MPA5243 0070601	7/8" x 3/4"	53.0	27.0	31.0	7/8"	3/4"
MPA5243 0090401	1 1/8" x 1/2"	61.0	28.5	43.5	1 1/8"	1/2"
MPA5243 0090501	1 1/8" x 5/8"	63.5	28.5	42.5	1 1/8"	5/8"
MPA5243 0090601	1 1/8" x 3/4"	60.0	28.5	38.0	1 1/8"	3/4"
MPA5243 0090701	1 1/8" x 7/8"	59.5	28.5	35.5	1 1/8"	7/8"
MPA5243 0110801	1 3/8" x 1"	66.0	30.0	39.0	1 3/8"	1"
MPA5243 0110901	1 3/8" x 1 1/8"	68.0	30.0	41.0	1 3/8"	1 1/8"

Note: All above measurements are in mm unless stated differently.

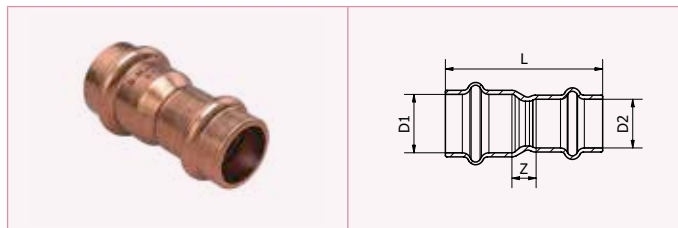

MPA5240 Reducing Coupler

Code	Size	L	Z	D1	D2
MPA5240 0030201	3/8" x 1/4"	42.0	6.0	3/8"	1/4"
MPA5240 0040201	1/2" x 1/4"	44.0	8.5	1/2"	1/4"
MPA5240 0040301	1/2" x 3/8"	42.5	7.0	1/2"	3/8"
MPA5240 0050201	5/8" x 1/4"	52.0	13.0	5/8"	1/4"
MPA5240 0050301	5/8" x 3/8"	47.5	8.5	5/8"	3/8"
MPA5240 0050401	5/8" x 1/2"	45.5	7.0	5/8"	1/2"
MPA5240 0060301	3/4" x 3/8"	51.0	11.0	3/4"	3/8"
MPA5240 0060401	3/4" x 1/2"	46.0	6.5	3/4"	1/2"
MPA5240 0060501	3/4" x 5/8"	52.5	9.5	3/4"	5/8"
MPA5240 0070401	7/8" x 1/2"	52.5	11.0	7/8"	1/2"
MPA5240 0070501	7/8" x 5/8"	52.5	7.5	7/8"	5/8"
MPA5240 0070601	7/8" x 3/4"	52.5	6.5	7/8"	3/4"
MPA5240 0080601	1" x 3/4"	55.0	9.5	1"	3/4"
MPA5240 0090501	1 1/8" x 5/8"	55.0	8.5	1 1/8"	5/8"
MPA5240 0090601	1 1/8" x 3/4"	57.5	10.0	1 1/8"	3/4"
MPA5240 0090701	1 1/8" x 7/8"	58.0	8.5	1 1/8"	7/8"
MPA5240 0090801	1 1/8" x 1"	56.0	7.0	1 1/8"	1"
MPA5240 0110701	1 3/8" x 7/8"	68.0	16.0	1 3/8"	7/8"
MPA5240 0110801	1 3/8" x 1"	66.0	15.0	1 3/8"	1"
MPA5240 0110901	1 3/8" x 1 1/8"	66.0	12.5	1 3/8"	1 1/8"

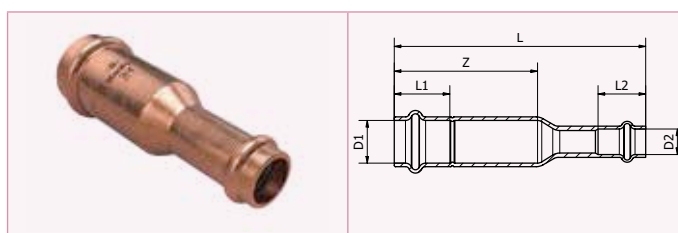


MPA5240L Long Reducing Coupler

Code	Size	D1	D2	L	L1	L2	Z
MPA5240L0030201	3/8" x 1/4"	3/8"	1/4"	94.5	18.0	18.0	58.0
MPA5240L0050301	5/8" x 3/8"	5/8"	3/8"	95.0	21.0	18.0	55.5
MPA5240L0050401	5/8" x 1/2"	5/8"	1/2"	95.0	21.0	17.5	55.5
MPA5240L0080501	1" x 5/8"	1"	5/8"	100.0	23.5	21.0	53.0


Note: All above measurements are in mm unless stated differently.

MPA5001 90° Street Bend

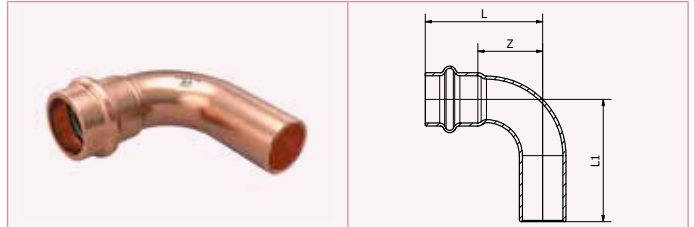

Code	Size	L	L1	Z
MPA5001 0030001	3/8"	33.0	34.5	15.0
MPA5001 0040001	1/2"	31.5	34.5	14.0
MPA5001 0050001	5/8"	39.0	45.0	18.0
MPA5001 0060001	3/4"	42.5	48.0	20.5
MPA5001 0070001	7/8"	50.0	53.0	26.0
MPA5001 0080001	1"	54.0	56.0	31.0
MPA5001 0090001	1 1/8"	57.0	61.5	31.5
MPA5001 0110001	1 3/8"	69.0	75.0	42.0


MPA5002 90° Bend

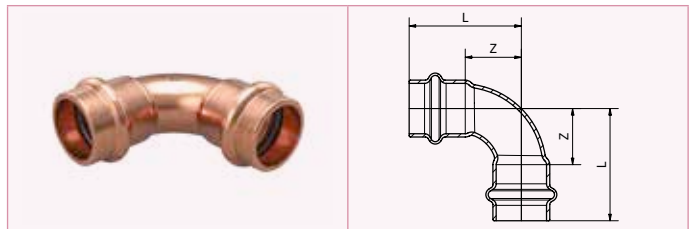

Code	Size	L	Z
MPA5002 0020001	1/4"	32.5	14.5
MPA5002 0030001	3/8"	33.0	15.0
MPA5002 0040001	1/2"	31.5	14.0
MPA5002 0050001	5/8"	39.0	18.0
MPA5002 0060001	3/4"	42.5	20.5
MPA5002 0070001	7/8"	50.0	26.0
MPA5002 0080001	1"	53.0	29.5
MPA5002 0090001	1 1/8"	57.0	31.5
MPA5002 0110001	1 3/8"	69.0	42.0


Note: All above measurements are in mm unless stated differently.

MPA5041
45° Obtuse Elbow

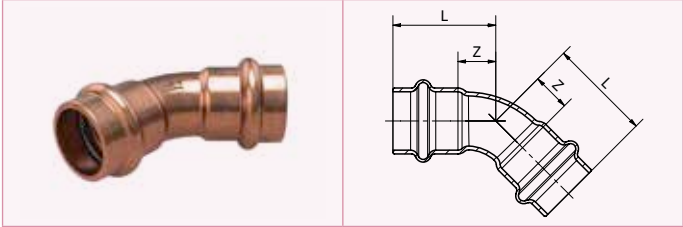

Code	Size	L	Z
MPA5041 0020001	1/4"	23.5	5.5
MPA5041 0030001	3/8"	26.0	8.0
MPA5041 0040001	1/2"	24.0	6.5
MPA5041 0050001	5/8"	28.0	7.0
MPA5041 0060001	3/4"	31.5	9.5
MPA5041 0070001	7/8"	34.0	10.0
MPA5041 0080001	1"	35.5	12.0
MPA5041 0090001	1 1/8"	39.5	14.0
MPA5041 0110001	1 3/8"	45.0	18.0


MPA5T
Equal Tee

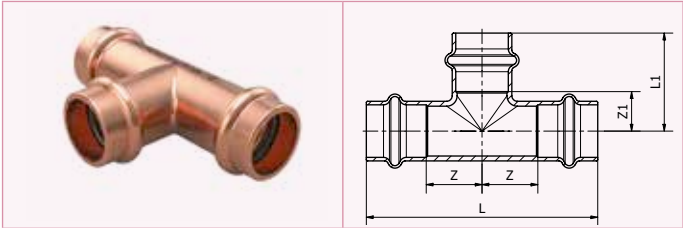

Code	Size	L	Z	L1	Z1
MPA5T 002020201	1/4"	54.0	9.0	27.0	9.0
MPA5T 003030301	3/8"	63.0	13.5	31.0	13.0
MPA5T 004040401	1/2"	66.0	15.5	28.0	10.5
MPA5T 005050501	5/8"	76.0	17.0	32.0	11.0
MPA5T 006060601	3/4"	84.0	20.0	36.0	14.0
MPA5T 007070701	7/8"	89.0	20.5	38.5	14.5
MPA5T 008080801	1"	92.0	22.5	40.0	16.5
MPA5T 009090901	1 1/8"	95.0	22.0	43.0	17.5
MPA5T 011111101	1 3/8"	98.0	22.0	49.0	22.0


Note: All above measurements are in mm unless stated differently.

MPA5301 Stop End

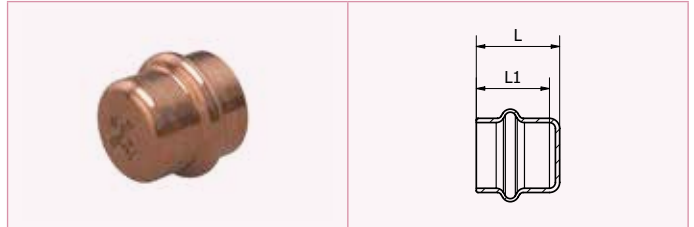


Code	Size	L	L1
MPA5301 0020001	1/4"	19.5	18.0
MPA5301 0030001	3/8"	19.5	18.0
MPA5301 0040001	1/2"	19.0	17.5
MPA5301 0050001	5/8"	22.5	21.0
MPA5301 0060001	3/4"	23.5	22.0
MPA5301 0070001	7/8"	26.0	24.0
MPA5301 0080001	1"	25.5	23.5
MPA5301 0090001	1 1/8"	27.5	25.5
MPA5301 0110001	1 3/8"	30.0	27.0

MPA5285G SAE Copper Flare - Brass Nut

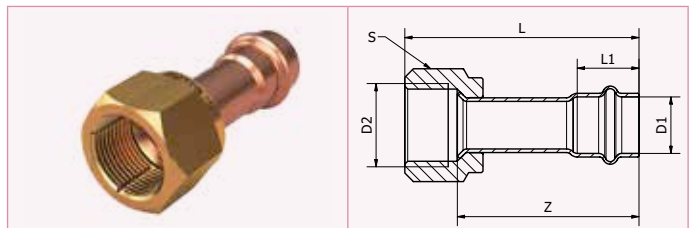

Code	Size	D1	D2	L mm	L1	Z	S
MPA5285G0020201	1/4"	1/4"	1/4"	54.0	18.0	46.0	17.0
MPA5285G0030301	3/8"	3/8"	3/8"	61.0	18.0	50.0	22.0
MPA5285G0040401	1/2"	1/2"	1/2"	63.5	17.5	51.5	24.0
MPA5285G0050501	5/8"	5/8"	5/8"	74.0	21.0	58.0	27.0
MPA5285G0060601	3/4"	3/4"	3/4"	81.5	22.0	63.5	34.0


MPA5286G SAE Stainless Flare - Brass Nut - Copper Washer

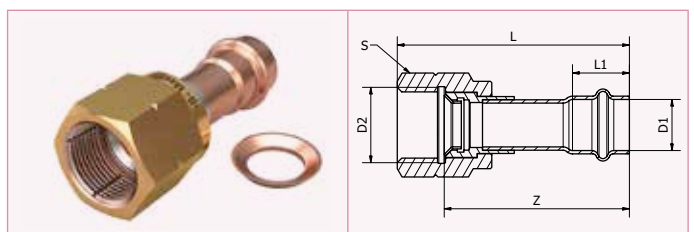

Code	Size	D1	D2	L	L1	Z	S
MPA5286G0020201	1/4"	1/4"	1/4"	64.0	18.0	55.5	17.0
MPA5286G0030301	3/8"	3/8"	3/8"	55.0	18.0	44.5	22.0
MPA5286G0040401	1/2"	1/2"	1/2"	64.5	17.5	52.5	24.0
MPA5286G0050501	5/8"	5/8"	5/8"	79.0	21.0	63.0	27.0
MPA5286G0060601	3/4"	3/4"	3/4"	85.0	22.0	67.0	34.0

Note: All above measurements are in mm unless stated differently.

MPA5289G SAE Stainless Flare - Stainless Nut - Copper Washer

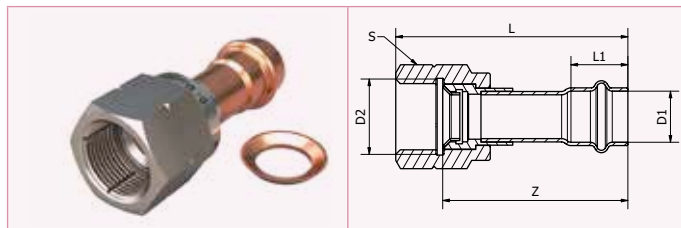


Code	Size	D1	D2	L	L1	Z	S
MPA5289G0020201	1/4"	1/4"	1/4"	64.0	18.0	55.5	17.0
MPA5289G0030301	3/8"	3/8"	3/8"	55.0	18.0	44.5	22.0
MPA5289G0040401	1/2"	1/2"	1/2"	64.5	17.5	52.5	24.0
MPA5289G0050501	5/8"	5/8"	5/8"	79.0	21.0	63.0	27.0
MPA5289G0060601	3/4"	3/4"	3/4"	85.0	22.0	67.0	34.0

MPA5287 Flare Copper Washer



Code	Size	L	A1
MPA5287 0020001	1/4"	3.0	45°
MPA5287 0030001	3/8"	3.5	45°
MPA5287 0040001	1/2"	4.5	45°
MPA5287 0050001	5/8"	4.5	45°
MPA5287 0060001	3/4"	6.5	45°

MPA5698 P-Trap

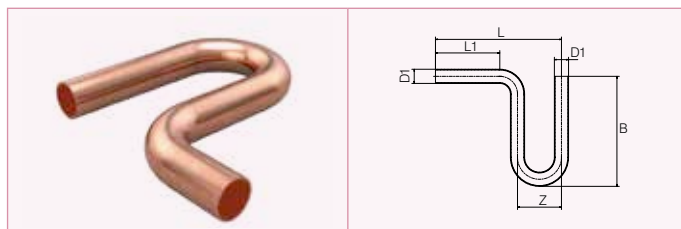

Code	Size	D1	L	L1	B	Z
MPA5698 0050001	5/8"	5/8"	171.0	103.5	151.5	45.0
MPA5698 0060001	3/4"	3/4"	172.0	91.0	158.5	54.0
MPA5698 0070001	7/8"	7/8"	171.0	72.0	170.0	66.0
MPA5698 0090001	1.1/8"	1 1/8"	170.0	44.0	173.5	84.0

Note: Not UL approved.

Note: All above measurements are in mm unless stated differently.

MPA Depth Gauge Depth Gauge and Marker



Part No	Description
MPA Depth Gauge	>B< MaxiPro Depth Gauge and Marker

MPABPSOIL Press Fitting Lubricant



Code	Size
MPABPSOIL100ML	100 ml

Note: All above measurements are in mm unless stated differently.

18.0 Extended Guarantee

When professionally installed by a trained and certified >B< MaxiPro installer*, and used and maintained in accordance with the installation and maintenance instructions detailed in the >B< MaxiPro technical brochure, Conex Universal Ltd. guarantees that >B< MaxiPro as supplied by Conex Universal Ltd. will be free of material defects resulting from errors in manufacture, for ten (10) years from the date of first purchase by an end user. This Guarantee is limited to the repair or replacement of defective product(s) (at the sole discretion of Conex Universal Ltd.). At the request of Conex Universal Ltd. the allegedly defective product(s) must be returned to the address adjacent** and Conex Universal Ltd. reserves the right to inspect and test the alleged defects. This guarantee provided by Conex Universal Ltd. does not affect your statutory rights.

The Guarantee set out above is given by Conex Universal Ltd. and subject to the following conditions:

A. Any alleged defects must be reported to Conex Universal Ltd. within one month of the first occurrence of any such alleged defect, clearly setting out the nature of the claim and the circumstances surrounding it.

B. Conex Universal Ltd. shall be under no liability in respect of any defect in any product arising from:

- defective installation,
- fair wear and tear,
- wilful damage,
- negligence of any party other than Conex Universal Ltd.,
- abnormal working or environmental conditions,
- failure to follow the instructions of Conex Universal Ltd.,
- misuse (which includes any use of the product(s) concerned for a purpose or in a situation / environment or for an application other than that for which it was designed), or
- alteration or repair of any product without the prior approval of Conex Universal Ltd.

C. At the request of Conex Universal Ltd. the person claiming under this guarantee must deliver to Conex Universal Ltd. written evidence of the date of first purchase by an end user of the product(s) concerned.

*For the installer to be suitably trained and certified for the purposes of this Product Guarantee the installer must have attended and passed a course on the >B< MaxiPro product held or expressly approved by Conex Universal Limited in relation to the use and installation of the >B< MaxiPro product.

**** The address for returns is:**

Customer Services
Conex Universal Limited
Global House
95 Vantage Point
The Pensnett Estate
Kingswinford
West Midlands
DY6 7FT
UNITED KINGDOM

19.0 Reference / Copy Pages

Technical data

Parameters	Capability
Applications	Air conditioning, refrigeration, heat pump (refrigerant side)
Connections	Copper to copper
Approved tube: Copper tube conforming to*	EN12735-1 or ASTM-B280
Fitting / tube range	1/4", 3/8", 1/2", 5/8", 3/4", 7/8", 1", 1 1/8", 1 3/8"
Fitting material	Refrigerant grade copper (UNS C12200 min 99.9% pure)
O-ring	HNBR
Approved oils	POE, PAO, PVE, AB and MO
Maximum operating and abnormal pressure	48 bar / 4800 kPa / 700 psig
Burst pressure >3 x maximum operating and abnormal pressure EN 378-2	>144 bar / >14400 kPa / >2100 psi
Leak tightness	Helium $\leq 7.5 \times 10^{-7}$ Pa.m ³ /s at +20 °C, 10 bar
Vacuum	200 microns
O-ring temperature range	-40 °C to 140 °C / -40 °F to 284 °F
UL listing continuous operating temperature	-40 °C to 121 °C / -40 °F to 250 °F
Compatible refrigerants	R-1234yf**, R-1234ze**, R-125, R-134a, R-290**, R-32**, R-404A, R-407A, R-407C, R-407F, R-407H, R-410A, R-417A, R-421A, R-422B, R-422D, R-427A, R-438A, R-444A**, R-447A**, R-447B**, R-448A, R-449A, R-450A, R-452A, R-452B**, R-452C, R-454A**, R-454B**, R-454C**, R-457A**, R-459A**, R-507A, R-513A, R-513B, R-600A**, R-718 and HYCOOL 20.

*Please refer to >B< MaxiPro tube compatibility table, see section 12.10.

** When using refrigerants classified A2L (lower flammability), A2 (flammable) and A3 (higher flammability) additional/ specific standards, local rules and regulations, codes of practice and by-laws may be applicable.

Note: >B< MaxiPro fittings are NOT suitable for R-717, R-723, R-764, R-744 refrigerants.

Tube compatibility

EN 12735-1 / EN 12735-2 - AS/ NZS 1571 - ASTM B280 - ASTM B88 - JIS H 3300														
Tube size Nominal OD		Nominal wall thickness												
> B < MaxiPro fitting size	Inch	0.025"	0.028" 22swg	0.030"	0.031" 0.032" 21swg	0.035" 0.036" 20swg	0.039" 0.040" 19swg	0.042"	0.045"	0.048" 18swg	0.049" 0.050"	0.055"	0.064" 0.065" 16swg	0.072" 15swg
	mm	0.64	0.71	0.76	0.80 0.81	0.89 0.90 0.91	1.00 1.02	1.07	1.14	1.22	1.24 1.25 1.27	1.40	1.63 1.65	1.83
1/4	0.250"	■	● ■	● ■	● ■	● ■	● ■							
3/8	0.375"		● ■	● ■	● ■	● ■	● ■							
1/2	0.500"		● ■	● ■	● ■	● ■	● ■			■	● ■			
5/8	0.625"		●	●	● ■	● ■	● ■		●	■	● ■			
3/4	0.750"		● ■		● ■	● ■	● ■	● ■	● ■	● ■	● ■			
7/8	0.875"		■		● ■	● ■	● ■		● ■	■	■	■	● ■	
1	1.000"		■			■	■			■			■	
1 1/8	1.125"					■	■			■	■		■	■
1 3/8	1.375"					■		■		■	■	■	■	

- Coil lengths in annealed condition
- Straight lengths in hard /half hard condition

Notes:

Hardness tolerance as per approved standards in the table above.

Ensure coil tubes are in round condition. Oval tubes should be re-rounded.

It is the engineers responsibility to ensure that the tube selected is compatible with >B< MaxiPro and meets the operating pressure requirements of the system.

Refrigerant compatibility

Refrigerant	GWP*	Safety Group	Compatible
R-125	3500	A1	✓
R-134a	1430	A1	✓
R-404A	3922	A1	✓
R-407A	2107	A1	✓
R-407C	1774	A1	✓
R-407F	1825	A1	✓
R-407H	1495	A1	✓
R-410A	2088	A1	✓
R-417A	2346	A1	✓
R-421A	2631	A1	✓
R-422B	2526	A1	✓
R-422D	2729	A1	✓
R-427A	2138	A1	✓
R-438A	2264	A1	✓
R-448A	1386	A1	✓
R-449A	1397	A1	✓
R-450A	601	A1	✓
R-452A	2140	A1	✓
R-452C	2220	A1	✓
R-507A	3985	A1	✓
R-513A	631	A1	✓
R-513B	596	A1	✓
R-718	0	A1	✓

Refrigerant	GWP*	Safety Group	Compatible
R1234yf	4	A2L**	✓
R1234ze	7	A2L**	✓
R-32	675	A2L**	✓
R-444A	92	A2L**	✓
R-447A	582	A2L**	✓
R-447B	740	A2L**	✓
R-452B	698	A2L**	✓
R-454A	239	A2L**	✓
R-454B	466	A2L**	✓
R-454C	148	A2L**	✓
R-457A	139	A2L**	✓
R-459A	460	A2L**	✓
R-290	3	A3**	✓
R-600A	3	A3**	✓
Medium			Compatible
HYCOOL 20			✓


Note: >B< MaxiPro fittings are NOT suitable for R-717, R-723, R-764, R-744 refrigerants.

* GWP: Global warming potential [CO₂ = 1,0]

** When using refrigerants classified A2L (lower flammability), A2 (flammable) and A3 (higher flammability) additional/specific standards, local rules and regulations, codes of practice and by-laws may be applicable.

Please check our website
www.conexbanninger.com/bmaxipro for updates on the
 >B< MaxiPro range.

Notes

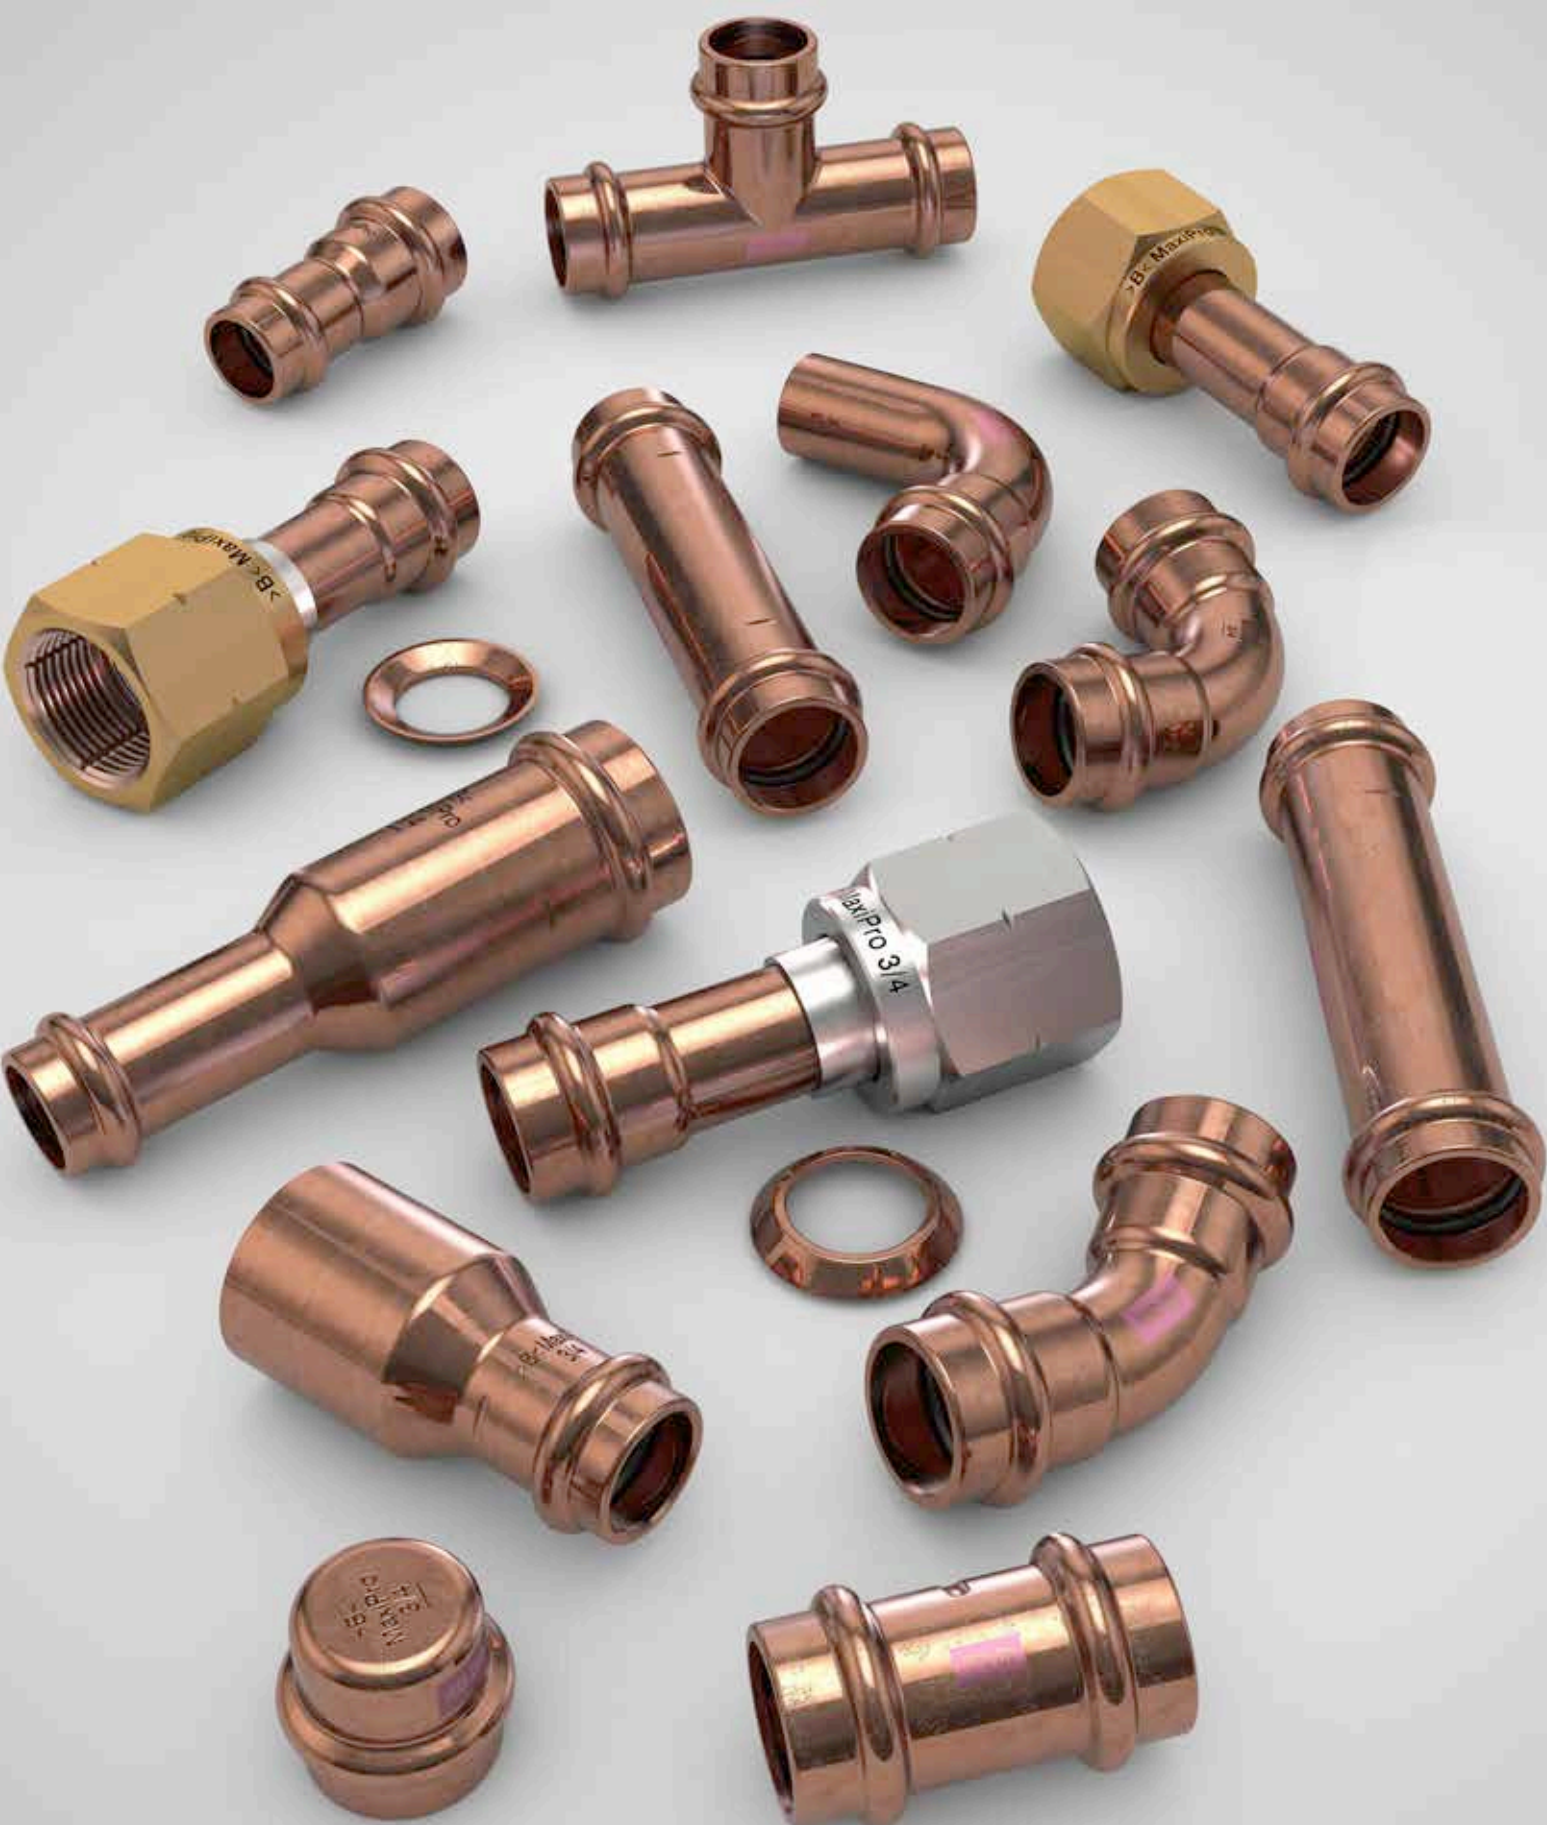

Conex | Bänninger

Conex | Bänninger
>B< Press

Conex | Bänninger
>B< Press Gas

Conex | Bänninger
>B< Press Solar

Conex | Bänninger
>B< Press XL

Conex | Bänninger
>B< Press Carbon

Conex | Bänninger
>B< Press Inox

Conex | Bänninger
>B< MaxiPro

Conex | Bänninger
>B< ACR

K65

Conex | Bänninger
>B< Push

Conex | Bänninger
>B< Flex

Conex | Bänninger
>B< Oyster

Conex | Bänninger
>B< Sonic

Conex | Bänninger
Triflow Solder Ring

Conex | Bänninger
Delcop End Feed

Conex | Bänninger
Delbraz

Conex | Bänninger
Medical Gas

Conex | Bänninger
Valves

Conex | Bänninger
Conex Compression

Conex | Bänninger
Series 3000

Conex | Bänninger
Series 4000

Conex | Bänninger
Series 5000

Conex | Bänninger
Series 8000

Conex | Bänninger
OEM



United Kingdom
Conex Universal Limited

Germany
IBP GmbH

Spain
IBP Atcosa SL

France
Conex Bänninger SRL

Italy
IBP Bänninger Italia srl

Poland Sales, Marketing and Logistics
IBP Instal fittings Sp z o.o.

USA
IBP Group LLC

China
IBP China

Tel: +44 (0)121 557 2831 | Fax: +44 (0)121 557 0185 | Email: salesuk@ibpgroup.com | www.conexbanninger.com

The content of this publication is for general information only. It is the user's responsibility to determine suitability of any product for the purpose intended and reference should be made to our Technical Department if clarification is required. In the interests of technical development we reserve the right to change specification, design and materials without notice.

Conex Bänninger products are approved by numerous Standards Authorities and Certification Bodies. IBP trademarks are registered in numerous countries.

More information online at: www.conexbanninger.com